

## Dra697Ci Manual

---

DENON

AM-FM STEREO RECEIVER  
**DRA-697CI**

OPERATING INSTRUCTIONS

**File Name:** Dra697Ci Manual.pdf

**Size:** 4247 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 5 May 2019, 23:10 PM

**Rating:** 4.6/5 from 799 votes.

**Status:** AVAILABLE

Last checked: 9 Minutes ago!

**In order to read or download Dra697Ci Manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dra697Ci Manual . To get started finding Dra697Ci Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# Dra697Ci Manual

At InstructionsManuals.com we have gathered together the manuals to make it easier for you to locate them. We take no responsibility for the validity of the information available in each manual nor do we have any affiliation with the brands nor their products. HI FI Systems Denon. All manuals on ManualsCat.com can be viewed completely free of charge. By using the Select a language button, you can choose the language of the manual you want to view. The exclamation point within an equilateral triangle is Use only with a cart, stand, This product should not be placed in a built-in If you are not sure of the type This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the Do not defeat the safety purpose of the polarized When installing an Never spill liquid of any Refer all servicing to qualified service personnel. Unauthorized substitutions may result in fire, electric shock, or other Operation is subject Modification not expressly approved by. DENON may void your authority, granted by the FCC, to use the product. B digital device, pursuant to Part 15 of the FCC Rules. These limits are This product generates, uses and can radiate radio frequency energy and, if However, there is no Hold the plug when unplugging the cord. Thank you for choosing the DENON DRA697CI AMFM Stereo Receiver. This remarkable component has been engineered to provide As this product is provided with an immense array of features, we recommend that before you begin hookup and operation that you review Getting Started. Connections. Operating the remote control unit. Combining the currently playing sound. Viewing still pictures and videos only for iPods. Multizone playback using the ZONE2 and. Outputting a program source to amplifier, etc., in the ZONE2. Operation. Accessories. Check that the following parts are attached in addition to the main Getting Started. Setup Menu Wall. Note. <http://www.extragsm.ro/images/news/concorde-sstsim-manual.xml>

- **denon dra697ci manual, dra697ci manual.**

For heat dispersal, do not install this unit in a confined space In addition to controlling the DRA697CI, the attached system remote Operating range of the remote control unit Inserting the batteries. Before using. Pay attention to the following before using this unit. To prevent short circuits or damaged wires in the connection cables, Using a mobile phone near this unit may result in noise. If so, move Check once again that all connections are correct and that there are Always set the power After reading the operating instructions, store them in a safe place Please be sure to turn off the power switch or unplug the cord Part names and functions. Front panel. For details on the functions of these parts, refer to the pages given in parentheses. This lights corresponding to the settings of the This displays the volume level. Lights while selecting the ZONE or REC. SELECT mode. Off when the "SOURCE" is This lights when the broadcast station is selected This lights when an FM stereo broadcast has Remote control signal. Volume control. Cursor buttons Rear panel Memory block Volume control Number buttons. Memory block Signal direction. Audio cable. Cable indications. The hookup diagrams on the subsequent pages assume the use of the following optional connection Connections. Analog connections Stereo Speaker connections Analog connections Video connections Audio signal Connecting the speaker cables. Speaker connections. Connect the speaker terminals with the speakers Note on speaker impedance. When using speakers with an impedance When the protection circuit is activated, the If the protection circuit is activated again even NEVER touch the speaker terminals when Either tightly twist or terminate the Turn clockwise to tighten, then Connection terminal for Speakers Connecting a DVD player and monitor Monitor Connecting a turntable MC head amplifier or stepup MC transformer. Connecting a VCR Connecting the antenna terminals. Direction of broadcasting FM antenna. FM indoor antenna

Supplied. <http://mpti.ru/userfiles/concorde-x-flight-manual.xml>

AM loop antenna AM outdoor antenna. Ground Connect to the AM Remove the vinyl tie Bend in the reverse Mount. Installation hole Mount on wall, etc. Connection of AM antennas This reminder is provided to call the CATV system installer's attention to Article 82040 of the NEC Connecting the XM terminal. MiniTuner and Home Dock includes home antenna, sold separately and subscribing to the XM service. For details, see "XM Satellite Radio" page 15, 16. When making connections, also refer to the operating instructions of the XM MiniTuner and Home. Dock. Home Dock All rights reserved. CONTROL jack on the DRA697CI with a minijack and assign the iPod to any AUDIO terminals. For instructions on assigning the iPod to a specific terminal, see "Setting the iPod Assignment" For instructions on playing the iPod, see "Playing the iPod" page 17. Connecting the MULTI ZONE terminals. Monitor Infrared sensor. Infrared retransmitter. For instructions on operations using the MULTI ZONE functions page 19. ZONE2 or ZONE3 PRE OUT connections ZONE3 the same time page 19. Monitor Power amplifier Input Output AC 120 V, 60 Hz. AC outlet Never use it for hair driers, monitors or other No power is supplied from this outlet when Never connect Power amplifier Turn the DC 12 V voltage on and off for the Connecting the RS232C terminal. This terminal is used for an external controller. Perform the following operation before using an After checking the above, check the connections of Operation is possible. Power supply cord About the button names in this explanation Button name only. Buttons on the main unit and remote control unit None. Select this when not assigning an iPod to the DRA697's input Canceling setup menu. To cancel the setup menu press MENU. Assignment". Use the DC 12 V output of the DRA697CI's two trigger out jacks in Canceling setup menu. To cancel the setup menu press MENU. Assignment". Trigger Out Trigger Out 1 Set this to "ON" if your speakers do not have a very strong capacity Canceling setup menu.

To cancel the setup menu press MENU. Operation. Playing the input source. Use FUNCTION to select the input source you want to Use VOLUME to adjust the volume. For operating instructions, refer to the component's manual. Connect the headphones to. Listening over headphones. Switching the speakers. Press to turn the corresponding speaker pair Press. Assignment". The brightness of the display can be adjusted in three steps. The Checking the currently playing program source, Press STATUS. This mode reproduces the sound with extremely high quality. The Selecting the play mode PURE DIRECT. Press PURE DIRECT. Use to set the level. Adjusting the speaker volume. Press to select the speaker. The settable speaker switches each time this button is pressed. Use to adjust the volume. Press to select "BASS" or Press to select "LOUDNESS ON". Combining the currently playing sound with the About the button names in this explanation Button name only. Buttons on the main unit and remote control unit Manual tuning. Press MODE to set the auto tuning mode. Press TUNING. Press MODE to set the manual tuning mode. Check that the display's "AUTO" indicator turns off. Press BAND to select "AM" or "FM". Press TUNING. The frequency changes continuously when the button is held in. Use the "Auto tuning" or "Manual tuning" operation Press MEMORY. Preset memory Press MEMORY again. Recalling preset stations Press ENTER. When the first FM broadcast station is found, that station is Subsequent stations are automatically stored in order at preset F8 and G1 to G8 for a maximum of 56 stations. Channel A1 is tuned in after the auto preset memory operation is Auto preset memory. This unit is equipped with a function for automatically searching for. FM broadcast stations and storing them in the preset memory. Auto tuner presets About the button names in this explanation Button name only. Buttons on the main unit and remote control unit From rock to Hardware and required monthly subscription sold separately.

<https://www.ziveknihy.sk/audiokniha/dmw-fl360-manual>

Other Subscription fee is consumer only. All fees and programming subject For a full listing of the XM commercial free channels and advertising Subscriptions subject to Customer Agreement available at XM Satellite Radio Inc. All rights reserved. All other trademarks are Once you have installed the

XM MiniTuner Dock, inserted the XM There are three places to find your Tuner package, and on XM Channel 0. Record the Radio ID in the Note The XM Radio ID does not use the letters "I", "O", "S" or "F". Activate your XM Satellite Radio service in the U.S. online at XM will send a signal from Activation normally When you can access the full channel lineup on your XM Ready home For more information or to subscribe in. Canada, visit XM on the Web at www.xmradio.ca or call XM's Listener. Care at 1877GETXMSR 18774389677. Once all number have been input, press ENTER to XM006 60s. CAT Rock. Channel selection. XM040 DeepTrksChannel number. Channel name. Channel category. The channel changes continuously when you press and hold Press STATUS until "SIGNAL" is displayed. Display MARGINAL Signal strength is marginal. WEAK Signal strength is poor. Loss of the signal. Radio ID Button name only. Buttons on the main unit and remote control unit With the iPod, noncopyrighted contents and contents that may be Violating copyrights is prohibited The music recorded on the iPod can be played when using a Control. Dock for iPod ASD1R, sold separately. The iPod can be controlled If the screens above are not displayed, the iPod may not be Connect the DRA697CI and iPod using the Control. Dock for iPod ASD1R page 9. Assignment" page 11. Press MODE for at least 2 seconds to switch from the. Browse mode to the Remote mode. Use this procedure to view photo and video data stored on the iPod Disconnecting the iPod. DRA697CI's power to the standby mode.

The iPod can be disconnected after switching to a function other Use the latest version of the The DRA697CI can display up to 64A "" mark is displayed in place of noncompatible characters. Listening to music in the Browse mode Press ENTER during playback. Press again to resume. The mode switches between the Remote mode and the Browse Track search H Move to beginning of next track. Repeat play. Press MODE. The mode switches as follows each time MODE is pressed. Stop. Press ENTER for at least 2 seconds during playback. Shuffle play. Press MEMORY. The mode switches as follows each time MEMORY is pressed. Manual search H Fast forward Multizone playback using the ZONE2 and ZONE3 PREOUT terminals To control playback devices other than the ones above, either use that device's remote control unit or preset a separately sold programmable Using external amplifier. Input. Monitor. MAIN ZONE 2.1 channel system. ZONE2 audio out System remote ZONE3 audio out Variable out Amplifer. Power. Amplifer Refer to "Connections" page 9. ZONE3 SELECT mode. Press to select "MZONE". Use FUNCTION to select the source you want to For operating instructions, refer to the manuals of the respective Button name only. Buttons on the main unit and remote control unit The MULTI ZONE source switches directly. The volume of the outputs of the different zones can. Default volume setting Button name only. Buttons on the main unit and remote control unit The various settings set when the DRA697CI's power is switched to When the power is turned back on, About the memory functions The various settings are stored in the memory for about 1 week, even Initialization of the microprocessor. If the indication on the display is not normal or if the operation of the Switch off the unit using. Press until "RECOU" Use FUNCTION to select the source to be recorded For operations, see the operating instructions of the device from For details, refer to the component's operating instructions.

While this remote control is compatible with a wide range of To store the codes of another component in the Setting the punch through function By default, nothing Input the number of the component you want to set. Operating a component stored in the preset Operate the component. For details, refer to the component's operating instructions. Some models cannot be operated with this remote control unit. MD recorder. Tape deck. CD recorder. DVD player. Cable TV. Satellite tuner CD player or iPod Punch through Punch through Play. Play. Punch through. Punch through Power on. Dimmer. Power on. Pause. Search reverse Power on. Skip reverse. Search reverse. Power off. Skip forward. Return. Enter. Display. Video selection. Status Stop. Menu. Punch through Punch through Search forward. Search forward. Cursor operation. Skip forward Enter. Status. Top menu. Cursor operation Forward play. Rewind. Reverse play. Fast forward. Pure direct Pure direct. Pure direct.

Pure direct Set up. Pure directMD recorder. Satellite tunerCD player or iPod. Special remarks.  
Default settingOperating the remote control unit Operating the remote control unitWhen a new code  
is preset, the previous code is automatically deleted.Check beforehand. Memory blockChannels.  
Memory block. Memory blockChannelsMemory block. ChannelsMemory block. Memory  
blockMemory block. Angle. Search mode. ChannelsSubtitle. Picture adjustMemory block. Channels.  
Memory blockMeasures. Cause. Symptom. Page. Measures. SymptomIf a problem should arise, first  
check the following.If this unit is not operating properly, check the items listed in the table below.  
Should the problem persist,Disconnect the power immediately and contact your store of purchase.  
Display not lit and soundPOWER switch set toDisplay lit but sound notVCR is not possible. DVD and  
a VCR is not usuallyDENON customer service center.XM MiniTuner and Home Dock is notNo sound  
is producedHome Dock.Receiving only XMRated output 1.2 VTotal Harmonic Distortion at 1 kHz  
MONO 0.

15 %Power supply AC 120 V, 60 Hz. Power consumption 4.2 AMass 10.5 kgMass 175 g Approx. 6.2  
oz included batteriesMass 80 g Approx. 2.8 oz included batteriesGoldstar 000, 006, 012, 062, 088.  
Gradiente 094. Grundig 042. Harley Davidson 094. Harman Kardon 040, 062. HiQ 091. Hitachi 009,  
013, 023, 026, 058. JC Penny 004, 005, 007, 023, 028,Lloyd 009, 094Marantz 004, 005, 006, 015,  
042,Midland 011Hitachi 010Magnavox 005. Mitsubishi 004. Panasonic 014. Philips 005, 015, 016,  
017. Pioneer 003, 008. Sanyo 018. Sony 002, 019, 020. Toshiba 001, 021, 022. Zenith 023Magnavox  
026. Mitsubishi 028. Panasonic 029, 030. Philips 026. Pioneer 028, 031Aiko 095. Aiwa 009. Akai 026,  
027, 070, 072, 082,Amstrad 009Audio Dynamic 005, 085. Audiovox 088. Beaumark 087. Broksonic  
086, 093. Calix 088. Candle 006, 087, 088, 089, 090. Canon 049, 057. Capehart 025, 055, 056, 071.  
Carver 015Curtis Mathes 006, 049, 073, 080, 087, Daewoo 025, 055, 059, 074, 089,Dynatech 009.  
Electrohome 001, 088, 097. Electrohome 088. Emerson 001, 009, 017, 027, 086,Minolta 013, 023.  
Mitsubishi 001, 003, 008, 013, 014, Montgomery Ward 001, 002, 007, 009, 049,Noblex 087. Optimus  
081, 088. Optonica 021. Panasonic 024, 049, 064, 066, 067,Pentax 009, 013, 023, 058, 090. Philco  
015, 016, 049. Philips 015, 021, 042, 049, 105. Pilot 088. Pioneer 005, 013, 029, 036, 037,Proscan  
063, 080. Pulsar 060. Quartz 033. Quasar 034, 035, 049. Radio Shack 001, 002, 021, 081,  
087,Randex 088Salora 033, 041. Samsung 007, 011, 051, 059, 070,Sansui 005, 026, 029, 045,  
061,Sharp 001, 002, 021, 097. Shogun 087. Sony 075, 076, 077, 078, 079,Tandy 009. Tashiko 009,  
088. Tatung 004, 026, 030. Teac 004, 009, 026, 094. Technics 024, 049. Teknika 009, 010, 022, 049,  
088,Unirech 087. Vecrtor Research 005, 062, 085, 089, 090. Victor 005, 045, 046, 085. Video  
Concepts 005, 027, 085, 089, 090. Videosonic 007, 087. Wards 013, 021, 023, 087, 088,Adventura  
122. Aiko 054. Akai 016, 027, 046. Alleron 062. AMark 007. Amtron 061. Anam 006, 007, 036.

Anam National 061, 147Audiovox 007, 061. Bauer 155. Belcor 047. Bradford 061. Brockwood 003,  
047. Candle 003, 030, 031, 032, 038,Celebrity 046. Circuit City 003. Citizen 029, 030, 031, 032,  
034,Colortyme 003, 047, 049, 135. Contec 013, 051, 052, 061. Cony 051, 052, 061. Craig 004, 061.  
Crown 029. Curtis Mathes 029, 034, 038, 044, 047,Dimensia 044. Dixi 007, 015, 027. Electroband  
046. Electrohome 029, 056, 057, 058, 147. Elta 027. Emerson 029, 051, 059, 060, 061,Etron 027.  
Fisher 014, 021, 063, 064, 065,Fortress 012. Fujitsu 004, 062. Funai 004, 062. Futuretech  
004Hitachi 029, 031, 051, 052, 070,Infinity 017, 071. Janeil 122Kenwood 038, 056, 057. Kloss 010,  
032. Kloss Novabeam 005, 122, 127, 131Logik 144. Luxman 031Matsui 027. Memorex 014, 027,  
045, 083, 118,Minutz 066. Mitsubishi 001, 016, 039, 048, 056,Motorola 121, 147National Quenties  
002Optonica 011, 012, 093, 121. Orion 004, 139. Panasonic 002, 009, 017, 036, 037,Portland 054.  
Price Club 095. Proscan 040, 044, 125. Proton 035, 051, 092, 129. Pulsar 042. Quasar 036, 037, 074,  
141. Radio Shack 011, 044, 063, 093, 118Saisho 027. Samsung 003, 015, 034, 053, 055,Sanyo 013,  
014, 021, 022, 063,Scott 062. Sears 008, 014, 021, 022, 023,Signature 045, 144. Simpson 050. Sony  
043, 046, 138, 146, 150. Soundesign 030, 050, 062. Spectricon 007, 033. Squareview 004.  
SupreMacy 032, 122. Supreme 046. Sylvania 005, 010, 017, 030, 078,Tandy 012, 121. Tatung 036,  
124. Technics 037.

<https://labroclub.ru/blog/dmw-mctz30-manual>